


3-3. Using the interior lights

Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode.

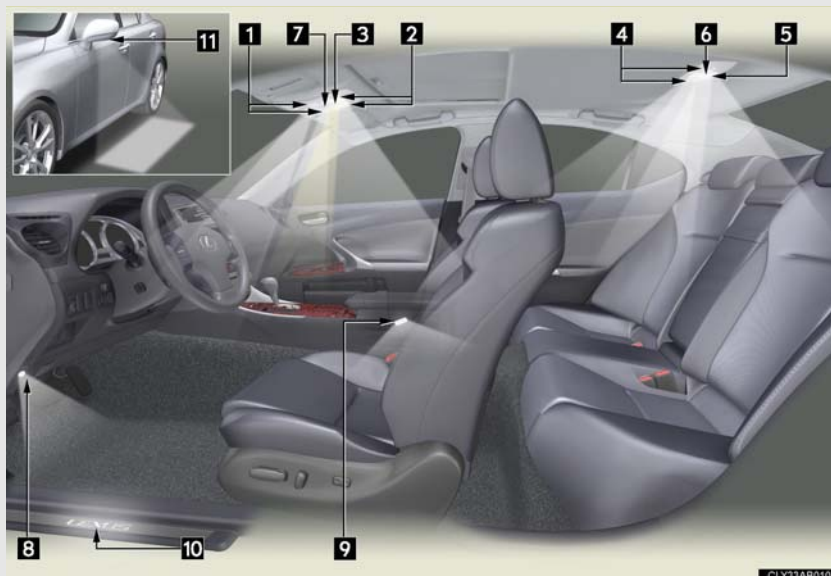

- 1 Front personal lights (→P. 234)
- 2 Front interior light (→P. 234)
- 3 Front overhead courtesy light
- 4 Rear personal lights (→P. 234)
- 5 Rear interior light
- 6 Rear overhead courtesy light
- 7 Shift lever lighting (when “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)
- 8 Front foot well lighting

3-3. Using the interior lights

- 9 Front door courtesy lighting
- 10 Front scuff lighting (if equipped)
- 11 Outer foot lights

Turning the instrument panel light control knob fully to the left disables the shift lever lighting and front foot well lighting.

n Illuminated entry system

The following interior lights come on automatically when you approach the vehicle with the electronic key on your person. Note that the illuminated entry system operates only when the interior light switch (door position on/off) is on.

- 1 Front overhead courtesy light
- 1 Rear overhead courtesy light
- 1 Outer foot light

The following lights turn on when any of the doors is unlocked or opened.

- 1 Front interior light
- 1 Rear interior lights
- 1 Front foot well lighting
- 1 Front door courtesy lighting
- 1 Front scuff lighting

The following lights turn on for approximately 15 seconds when the "ENGINE START STOP" switch is turned to OFF from the IGNITION ON or ACCESSORY mode. (The lights turn off immediately if the doors are locked or the "ENGINE START STOP" switch is set to ACCESSORY or IGNITION ON mode.)

- 1 Front overhead courtesy light
- 1 Rear overhead courtesy light

n To prevent the battery from being discharged


If the overhead courtesy lights and interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

n Customization that can be configured at Lexus dealer

Setting (e.g. The time elapsed before lights turn off) can be changed. (Customizable features → P. 436)

Interior lights

► Models without an electric moon roof

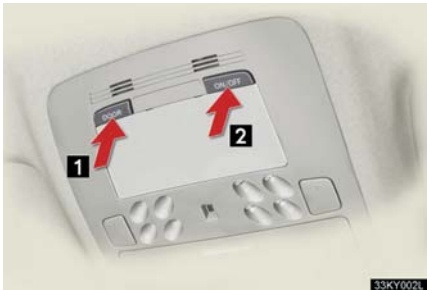

- 1 Door position on/off
- 2 On/off

► Models with an electric moon roof



- 1 Door position on/off
- 2 On/off

Personal lights

► Front (models without an electric moon roof)



- 1 On/off

► Front (models with an electric moon roof)



1 On/off

► Rear



1 On/off